



Accelerating Performance

Battery Disconnect - 2 Terminal P/N 46200 and 46205

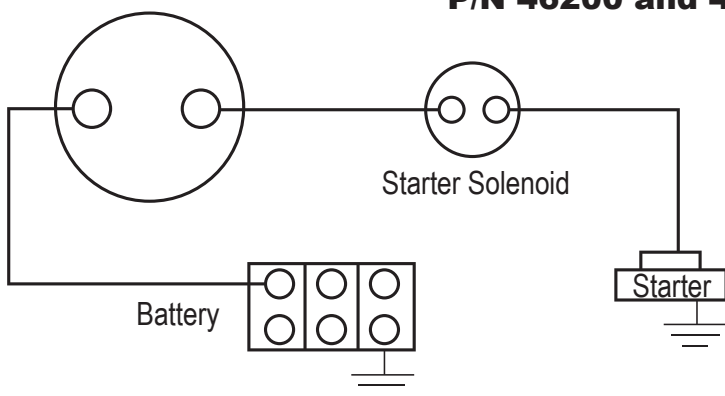


Diagram shown is the most commonly used for wiring the master disconnect switch.

Master Disconnect Switch without alternator

Disconnect battery circuit only. Does not disconnect alternator or generator field circuit. When used with an alternator, the engine should be stopped before switching to the OFF position to prevent possible alternator diode failure.

www.joesracing.com



Accelerating Performance

Battery Disconnect - 2 Terminal P/N 46200 and 46205

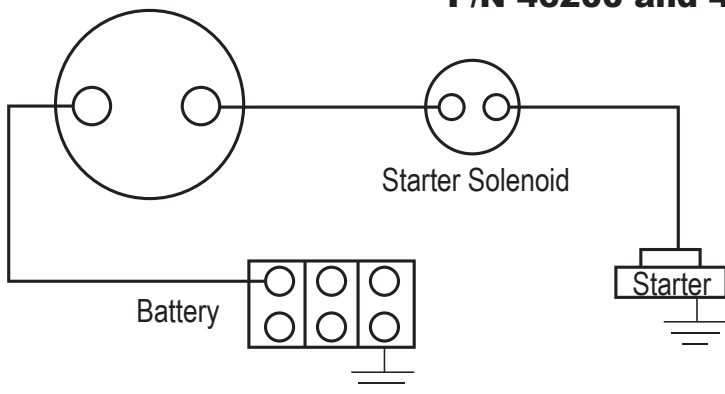


Diagram shown is the most commonly used for wiring the master disconnect switch.

Master Disconnect Switch without alternator

Disconnect battery circuit only. Does not disconnect alternator or generator field circuit. When used with an alternator, the engine should be stopped before switching to the OFF position to prevent possible alternator diode failure.

www.joesracing.com